# Please read before Assembly and Installation of Product

Must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations.

Before attempting to install or use a fixture, read and understand the installation instructions and safety labels.

Do not use a fixture if the lens, housing or power cables are damaged.

Ensure that the main power supply is off before installing or wiring a fixture.

Risk of shock and no user serviceable parts. Do not attempt to open them.

Do not use a fixture for any voltage for which it is not rated. Do not exceed the specified voltage and current input for any fixtures.

Press both connectors together until there is an audible click.

This device complies with Part 15 of the FCC Rules.

This Class B digital apparatus complies with Canadian ICES-003.

Do not hot swap fixtures.

Ensure that power to the series is off before connecting or disconnecting individual fixtures.

## Step 1


Verify electrical plan

Calculate the number of fixtures each circuit can support based on: model of fixture, line voltage, circuit load and cable length.

# Step 2

Check that all components are accounted for



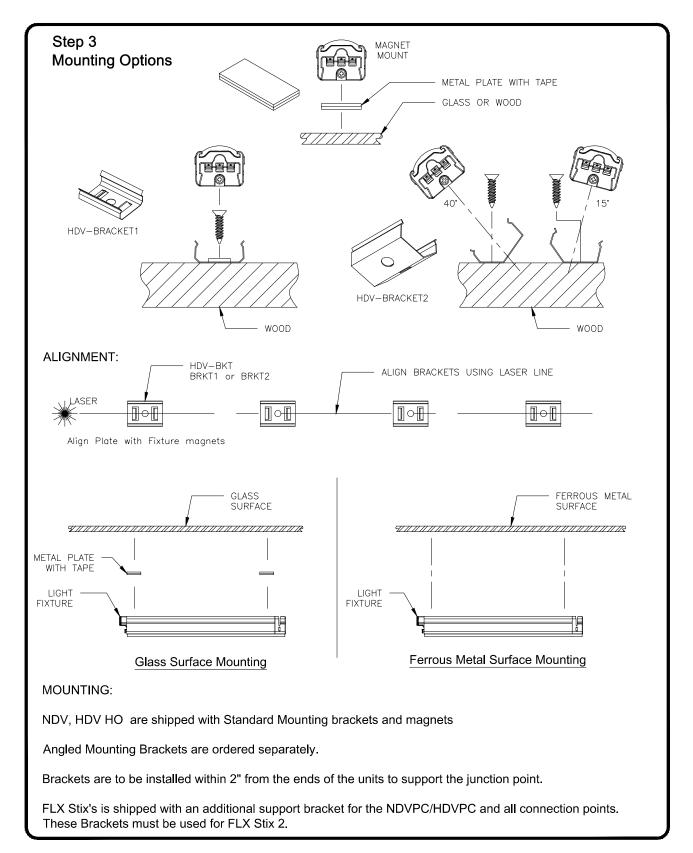

## SIDE FEEDS:

Side Feed Units insure uninterrupted continous lines of lights FLX Stix requires a Side Feed Unit for runs that exceed 55w or ~14.5'. FLX Stix HO requires a Side Feed Unit for runs that exceed 75w or ~12'. Side Feed Units require power.

FLX Stix DIMMING:

Please ensure compatibility prior to installation:

Feelux FLC and XLD -0-10v Dimming: Feelux Interface required.

Eklipse -0-10v Dimming interface is not required.

QTran -Q6S and QTM - Forward phase magnetic low voltage dimming; no interface required.

APPROVED DRIVERS / TRANSFROMERS:

FLX Stix Series can be installed with the following approved drivers/transfromers/power supplies

Feelux FLC AND XLD Series drivers

QTran Q6S, Q6M, QTM and QTM ELED

When dimming, QTran QTM-DC+CAP units maybe required

Eklipse Light Manager

Lutron

Other drivers have not been tested and will NOT comply with the Feelux Warranty

#### SPLICING:

When using Feelux XLD, QTran or Eklipse, the driver end of the power feed cable is cut and spliced to the driver.

Polarity must be followed and is:

FLX Stix NDV Lead with Gray Stripes is NEGATIVE Lead with writing and white is POSITIVE

FLX Stix HDV HO Lead with ++++++ + is NEGATIVE Lead with xxxxxxxx is POSITIVE

Contractor must test for 24V DC at splice points

JUMPERS:

Jumpers cannot be cut or spliced at any time without written permission from Feelux.



